



 
 
The installation of the cabinet to castors is necessary when it is unavoidable to move the cabinet after the installation of all components. It is very important to choose the right type of castors according to total weight of the cabinet – weight of installed components and accessories plus weight of the cabinet. It is important to consider carefully the usage of castors especially for the installation of slide-out devices (servers), because castors limit stability of the cabinet.

The supply of 4 castors includes: 2 castors with break, 2 without break and complete mounting material.





Castors

Type	A [mm]	B [mm]	Max. recommended loading capacity (kg)
RAX-MS-X82-X1	70	100	800

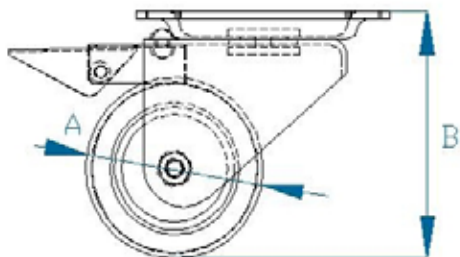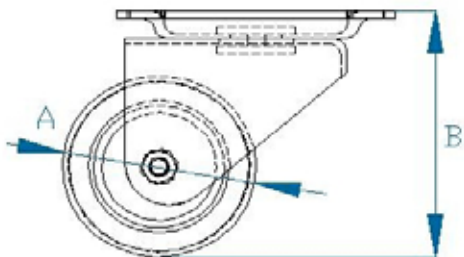

Type	A [mm]	B [mm]	Max. recommended loading capacity (kg)
RAX-MS-X98-X1	75	105	200

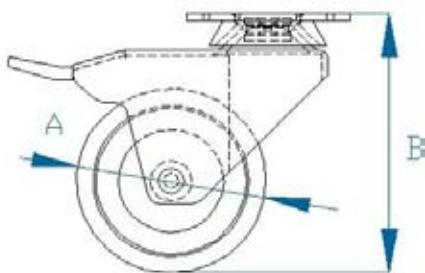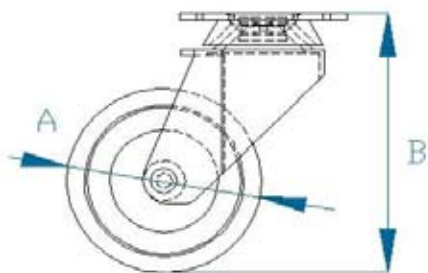

TRITON

Triton Pardubice, spol. s r. o.
Starý Mateřov 130, 530 02 Pardubice
tel: +420 467 401 111, fax: +420 467 401 130
obchod@triton.cz, www.triton.cz

Triton Chemnitz GmbH
Wolgograder Alee 24, 09123 Chemnitz - Germany
Tel: +49 371 520 2271, Fax: +49 371 520 2272
info@triton-racks.de, www.triton-racks.de