

## Castors, feet, stabilizers



### ■ RAX-MS-X81-X1

Direct mounting castors set with max. recommended load capacity\*:

- 200 kg for type RMA, RZA 600 mm wide,
- 400 kg for type RMA, RZA 800 mm wide.

The height of the cabinet is increased by 111 mm.

#### Set

Castors with a brake .....	2x
Castors without a brake .....	2x
Screw M5 x 20 Thorx .....	16x
Flat washer 5,3 .....	16x



### ■ RAX-MS-X47-X1

Direct mounting castors set with max. recommended load capacity\*:

- 500 kg for type RDA, RDE, RTA, RYA 600 mm wide,
- 600 kg for type RDA, RDE, RTA, RYA 800 mm wide.

The height of the cabinet is increased by 155 mm.

#### Set

Castors with a brake .....	2x
Castors without a brake .....	2x
Screw M5 x 20 Thorx .....	16x
Flat washer 5,3 .....	16x



### ■ RAB-SS-X01-X1, RAC-SS-X01-X1

Stabilizers for free-standing cabinets.

#### Supply

Screw M5 x 12 .....	4x
---------------------	----



### ■ RAX-MS-X64-X1

Set of adjustable feet for free-standing cabinets with possibility of installation from the inner side of the cabinet.

After rectification, it is necessary to ensure the position by the nut. The cabinet is raised in the range of 24-35 mm depending on the setting of the feet.



**■ RAX-RK-Xxx-X1**

Castors with reinforcing frame

Castors with reinforcing frame for RMA, RZA type enclosures. Must be ordered according to the floor plan of the cabinet.

**Max. load capacity** when using **RAX-RK-Xxx-X1**:


- **450 kg** including the weight of the cabinet.

The height of the cabinet is increased by 111 mm.

**Set**

- Castors with a brake ..... 2x
- Castors without a brake ..... 2x
- Screw M5 x 12 Thorx ..... 16x
- Screw M5 x 20 Thorx ..... 16x
- Flat washer 5,3 ..... 16x
- U-profile ..... 4x

Cabinet depth (mm)	Cabinet width (mm)	
	600	800
600	RAX-RK-X66-X1	RAX-RK-X86-X1
800	RAX-RK-X68-X1	RAX-RK-X88-X1
900	RAX-RK-X69-X1	RAX-RK-X89-X1
1000	RAX-RK-X61-X1	RAX-RK-X81-X1
1100	RAX-RK-X60-X1	RAX-RK-X80-X1
1200	RAX-RK-X62-X1	RAX-RK-X82-X1

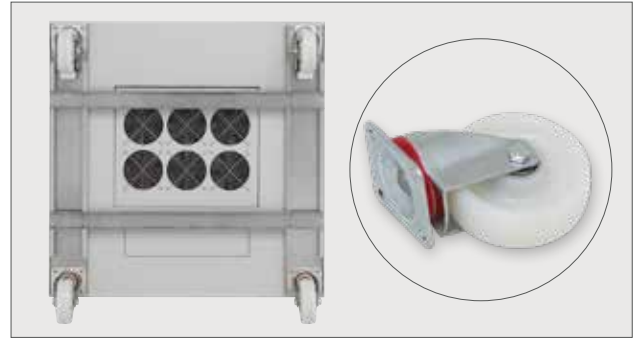

**■ RAX-RK-Dxx-X1**

Castors with reinforcing frame

Castors with reinforcing frame for RMA, RZA, RTA, RYA, RDA, RDE type enclosures. Must be ordered according to the floor plan of the cabinet.

**Max. recommended load capacity:**

- **900 kg** for type **RMA, RZA,**

- **1050 kg** for type **RTA, RYA, RDA, RDE.**

The height of the cabinet is increased by 158 mm.

**Set**

- Castors with a brake ..... 2x
- Castors without a brake ..... 2x
- Screw M5 x 12 Thorx ..... 16x
- Screw M5 x 20 Thorx ..... 16x
- Flat washer 5,3 ..... 16x
- U-profile ..... 4x

Cabinet depth (mm)	Cabinet width (mm)	
	600	800
600	RAX-RK-D66-X1	RAX-RK-D86-X1
800	RAX-RK-D68-X1	RAX-RK-D88-X1
900	RAX-RK-D69-X1	RAX-RK-D89-X1
1000	RAX-RK-D61-X1	RAX-RK-D81-X1
1100	RAX-RK-D60-X1	RAX-RK-D80-X1
1200	RAX-RK-D62-X1	RAX-RK-D82-X1



### ■ RAX-RK-Txx-X1

Castors with reinforcing fram

Castors with reinforcing frame for RTA, RYA, RDA, RDE type enclosures. Must be ordered according to the floor plan of the cabinet.

**Max. load capacity** when using **RAX-RK-Txx-X1**:


- **1500 kg** including the weight of the cabinet.

The height of the cabinet is increased by 143 mm.

**Set**

- Castors with a brake ..... 2x
- Castors without a brake ..... 2x
- Screw M5 x 12 Thorx ..... 16x
- Screw M5 x 20 Thorx ..... 16x
- Flat washer 5,3 ..... 16x
- U-profile ..... 4x

Cabinet depth (mm)	Cabinet width (mm)	
	600	800
600	RAX-RK-T66-X1	RAX-RK-T86-X1
800	RAX-RK-T68-X1	RAX-RK-T88-X1
900	RAX-RK-T69-X1	RAX-RK-T89-X1
1000	RAX-RK-T61-X1	RAX-RK-T81-X1
1100	RAX-RK-T60-X1	RAX-RK-T80-X1
1200	RAX-RK-T62-X1	RAX-RK-T82-X1

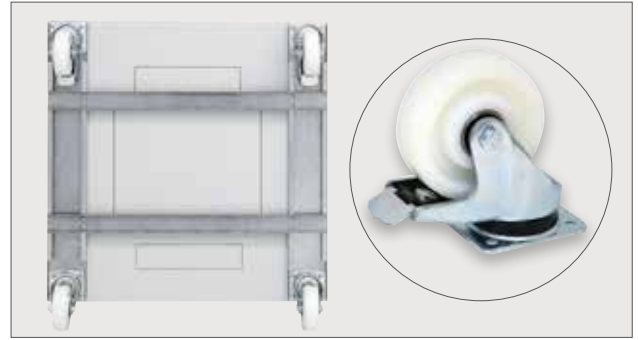

### ■ RAX-RK-Hxx-X1

Castors with reinforcing fram

Castors with reinforcing frame for RTA, RYA, RDA, RDE type enclosures. Must be ordered according to the floor plan of the cabinet.

**Max. recommended load capacity:**

- **1600 kg** for type **RTA, RYA,**

- **1900 kg** for type **RDA, RDE.**

The height of the cabinet is increased by 168 mm.

**Set**

- Castors with a brake ..... 2x
- Castors without a brake ..... 2x
- Screw M5 x 12 Thorx ..... 16x
- Screw M5 x 20 Thorx ..... 16x
- Flat washer 5,3 ..... 16x
- U-profile ..... 4x

Cabinet depth (mm)	Cabinet width (mm)	
	600	800
600	RAX-RK-H66-X1	RAX-RK-H86-X1
800	RAX-RK-H68-X1	RAX-RK-H88-X1
900	RAX-RK-H69-X1	RAX-RK-H89-X1
1000	RAX-RK-H61-X1	RAX-RK-H81-X1
1100	RAX-RK-H60-X1	RAX-RK-H80-X1
1200	RAX-RK-H62-X1	RAX-RK-H82-X1

**STOP** For the correct use of the optional Accessories the following instructions are important:

- install the cabinet on a level and sufficiently firm floor
- place at least 65% of the load in the the lower half of the height of the cabinet
- ensure that the load is evenly distributed between the front and rear vertical rails
- when travelling with a loaded distributor, comply with the relevant standards\*

**Calculation of the load capacity of one wheel:**

*Total weight of the cabinet (i.e. own weight + installed accessories) / 3 = load capacity of one castor.*

*\* The load capacities of the castors are applicable for travel speed up to 4 km/h on level ground and smooth surface at ambient temperature in the range of 10-30° C. All dimensions, load capacities and tolerances correspond to following standards: EN 12527-12533, DIN 7845.*